

NOTICE DE MONTAGE


FLANCS DE CARENAGE ERMAX ADAPTABLES SUR FZ1 2006 → ∞

Kit de fixation

- 4 entretoises plastique Ø6 L : 10 mm
- 4 rondelles plastique Ø6
- 2 entretoises caoutchouc L : 5 mm
- 2 vis BHc 6×20
- 2 vis BHc 6×25
- 50 cm de joint caoutchouc

Montage

- Démontez les deux caches radiateur d'origine. Assurez-vous que le sabot moteur est correctement monté.
- Positionnez les flancs en insérant la languette inférieure entre le moteur et le sabot.
- Disposez un morceau de joint caoutchouc sur la partie supérieure des flancs (le bord en contact avec le carénage).
- Pour les points supérieurs A, fixez les flancs à l'aide des vis BHc 6×25 et 2 rondelles plastique, en insérant une entretoise caoutchouc et une entretoise plastique entre chaque flanc et le radiateur.
- Pour les points inférieurs B, utilisez les vis BHc 6×20, 2 rondelles plastique et insérez une entretoise plastique entre le radiateur et les flancs.

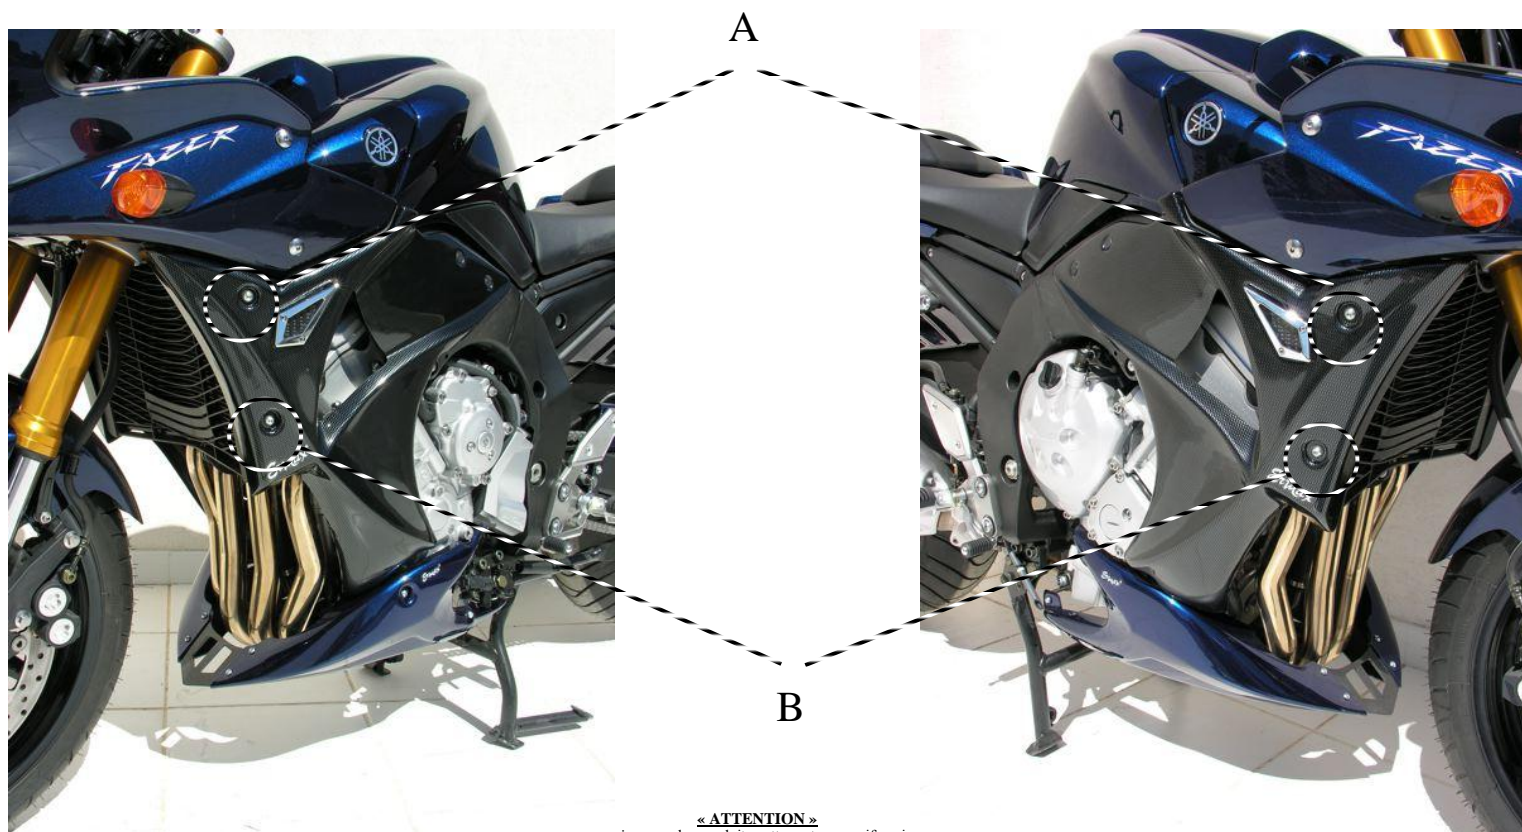

« ATTENTION »

... données techniques de nos fournisseurs en peinture, d'attendre un mois afin d'obtenir une polymérisation complète du vernis. Vous conseillons à défaut, et après les

* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.

* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.

* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.

* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.

FITTING INSTRUCTIONS


*ERMAX SIDE PANELS
ADAPTABLE ON FZ1 2006 → ∞*

Fitting kit

- 4 plastic spacers Ø6 L : 10 mm
- 4 plastic washers Ø6
- 2 rubber spacers L : 5 mm
- 2 BHc 6×20 screws
- 2 BHc 6×25 screws
- 50 cm rubber edge trim

Assembly

- Remove the two original radiator covers. Ensure that Ermax belly pan is correctly fitted.
- Position the side panel by inserting the lower edge between the engine and Ermax belly pan.
- Use a piece of the rubber edge trim on the upper most edge of side panel (the edge that comes into contact with the bottom of fairing).
- For fixing points A, use the two 6x25 screws and two plastic washers, and insert one rubber spacer and one plastic spacer between each panel and the radiator.
- For fixing points B, use the two 6x20 screws and two plastic washers, and insert plastic spacer between radiator and panels.

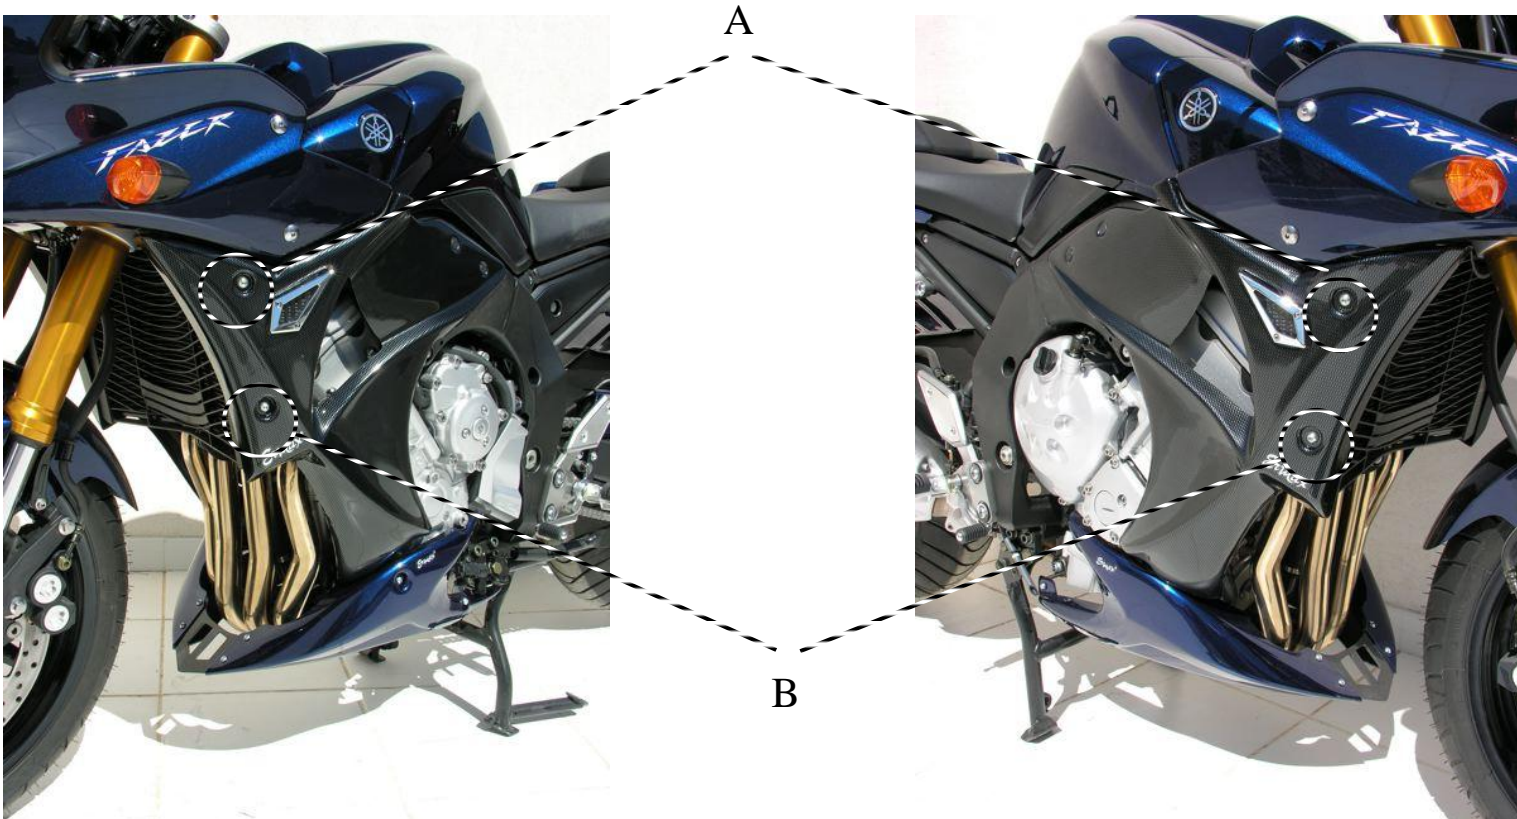

« CAUTION »

- * Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, **to wait one month** to obtain a complete polymerization of varnish.
- * Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- * Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- * Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustments to fit.
- * Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- * The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.