


### **SAUTE VENT ERMAX ADAPTABLE SUR CB 1000 R 2008/2017**


#### Kit de fixation

- 1 patte de fixation
- 4 inserts filetés caoutchouc Ø5
- 1 support plastique
- 5 vis BHc 5x20 (petite tête)
- 5 rondelles plastique Ø5
- 1 agrafe filetée Ø5

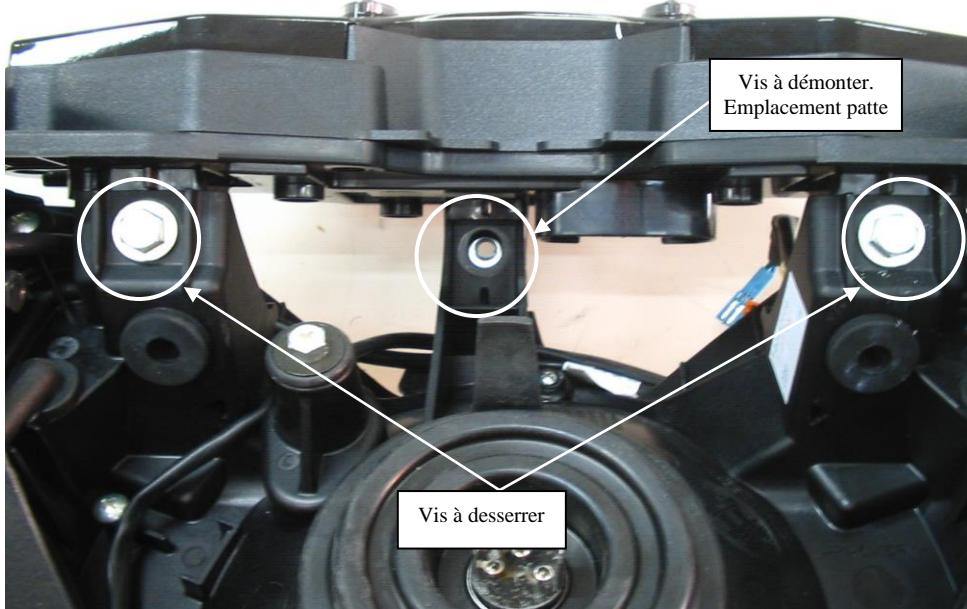

#### Montage

- Démonter la tête de fourche d'origine. Desserrer les 2 vis (celles indiquées sur la photo). Enlever la vis centrale.
- Positionner l'agrafe sur la patte de fixation. Insérer la patte entre le bloc compteur et la patte d'origine de fixation compteur (voir photos ci-dessous).

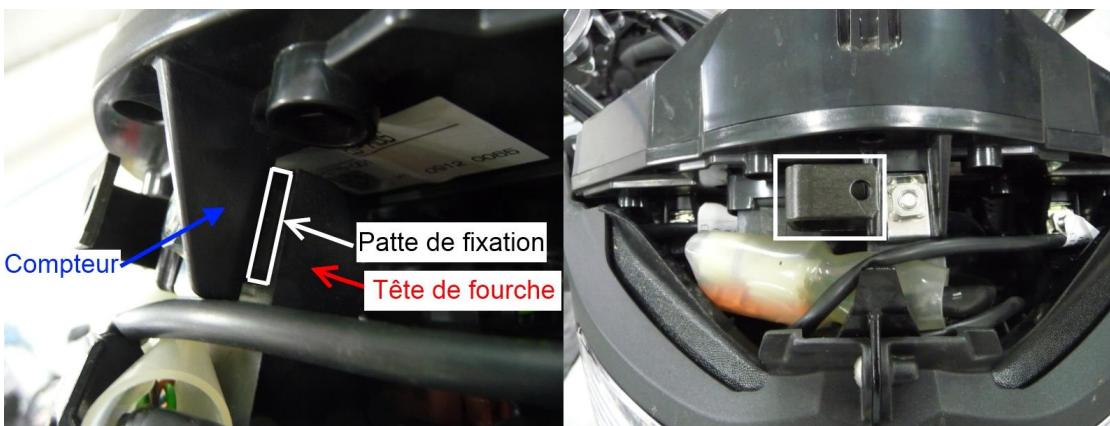

- Positionner le support plastique fourni. Remettre les 2 clips de la tête de fourche d'origine à leur emplacement. Mettre la vis BHc 5x20 au centre du support.
- Positionner les inserts dans le support. Positionner la bulle. La serrer grâce aux vis restantes. Les rondelles s'intercalent entre la vis et la bulle, et entre la vis et le support pour ne pas abîmer l'élément.

#### « ATTENTION »

\* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.

\* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis si ils sont utilisés dans d'autres conditions.

\* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

\* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.


\* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.

## FITTING INSTRUCTIONS

### **ERMAX NOSE SCREEN ADAPTABLE ON CB 1000 R 2008/2017**


#### Fitting kit

- 1 fitting bracket
- 4 Ø5 rubber threaded fasteners
- 1 plastic support
- 5 BHc 5x20 screws (small head)
- 5 Ø5 plastic washers
- 1 threaded fastener

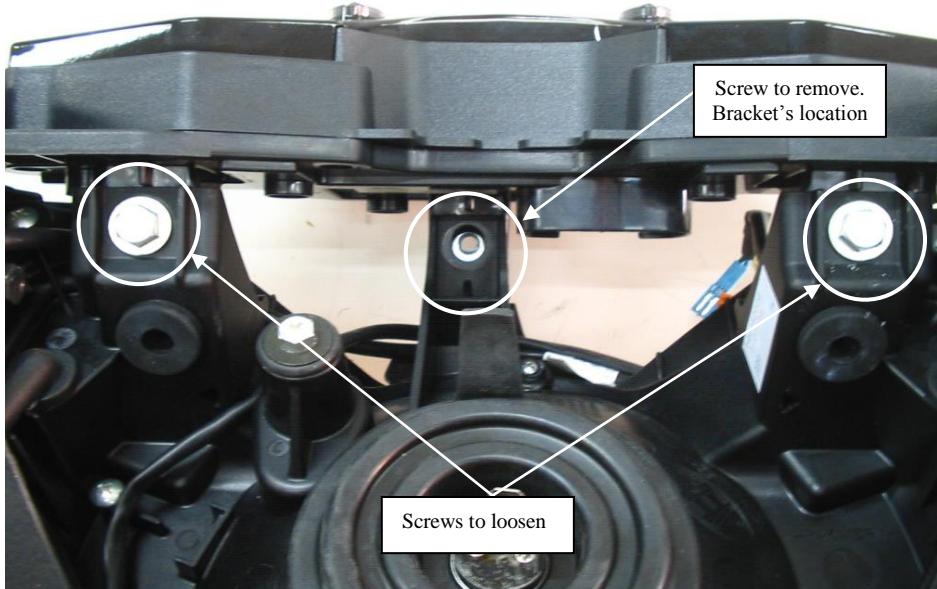

#### Assembly

- Remove the original nose fairing and loosen the 2 screws shown on the picture. Then remove the central screw.
- Place the fastener on the fitting bracket. Insert the provided bracket between the whole of the meter and the original fitting bracket of the meter (see pictures below).

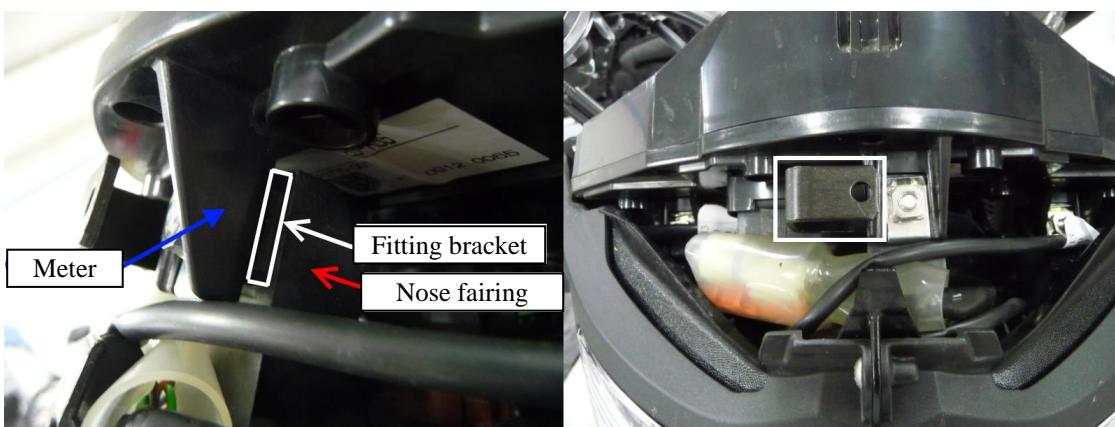

- Place the provided plastic support. Replace the 2 clips of the original nose fairing at their location. Put the BHc 5x20 screw at the middle of the support.
- Place the inserts into the support. Place the screen. Tighten it thanks to the remaining screws. Spacers have to be inserted between the screw and the screen, and between the screw and the support not to damage the piece.

#### **« CAUTION »**

- \* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- \* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- \* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjusting to fit.
- \* Care to excessive clamping which may damage or break our plastic accessories and aluminum screws.
- \* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.