

## PARE-BRISE UNIVERSELS POUR ROADSTER

# Stunt<sup>®</sup> & Mini Stunt<sup>®</sup>



### KIT DE FIXATION

- 2 colliers de serrage en plastique renforcé (avec axe acier)
- 2 bagues métalliques (pour vis trouée)
- 2 tiges métalliques Ø10
- 4 demi-bagues d'épaisseur en plastique
- 2 vis trouées Ø8x40
- 2 écrous borgnes M8
- 2 grandes vis et écrous en plastique injecté
- 2 rondelles M8

### MONTAGE


- Positionnez les colliers de serrage sur le guidon en utilisant si nécessaire une ou plusieurs demi-bagues d'épaisseur pour ajuster au diamètre du guidon.

- Montez les tiges métalliques Ø10 sur les colliers comme indiqué sur la photo.

- Fixez ensuite le pare-brise avec les grandes vis en plastique.

- Ajustez la position du pare-brise et bloquez fermement les colliers.

**NB :** pour une plus grande solidité de vos colliers plastiques, une reprise d'humidité est nécessaire après injection : trempez les colliers dans de l'eau chaude puis laissez refroidir 12 h à température ambiante.

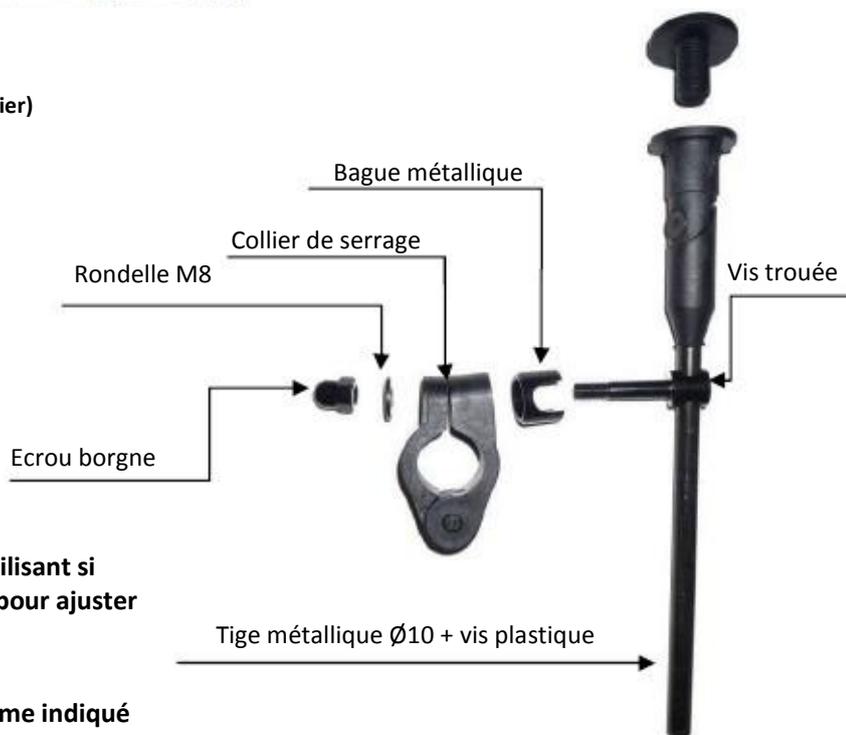

#### « ATTENTION »

Tout accessoire monté ne sera plus considéré comme neuf et ne sera ni repris ni échangé. Les accessoires Ermax sont conçus pour des montes d'origine. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions. En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation. Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires et les vis en aluminium. Afin d'augmenter la longévité de vos fixations, il est recommandé de les nettoyer avec un produit anticorrosion de genre WD40<sup>®</sup> après chaque lavage ou exposition en atmosphère humide (pluie ...).


## UNIVERSAL WINDSHIELDS FOR NAKED BIKES

# *Stunt*<sup>®</sup> & *Mini Stunt*<sup>®</sup>



### FITTING KIT

- 2 reinforced plastic clamps (with steel axis)
- 2 metallic rings (for holed screws)
- 2 metallic bars  $\varnothing 10$
- 4 plastics half-rings thick
- 2  $\varnothing 8 \times 40$  holed screws
- 2 M8 blind nuts
- 2 large screws and nuts in plastic injected
- 2 M8 washers

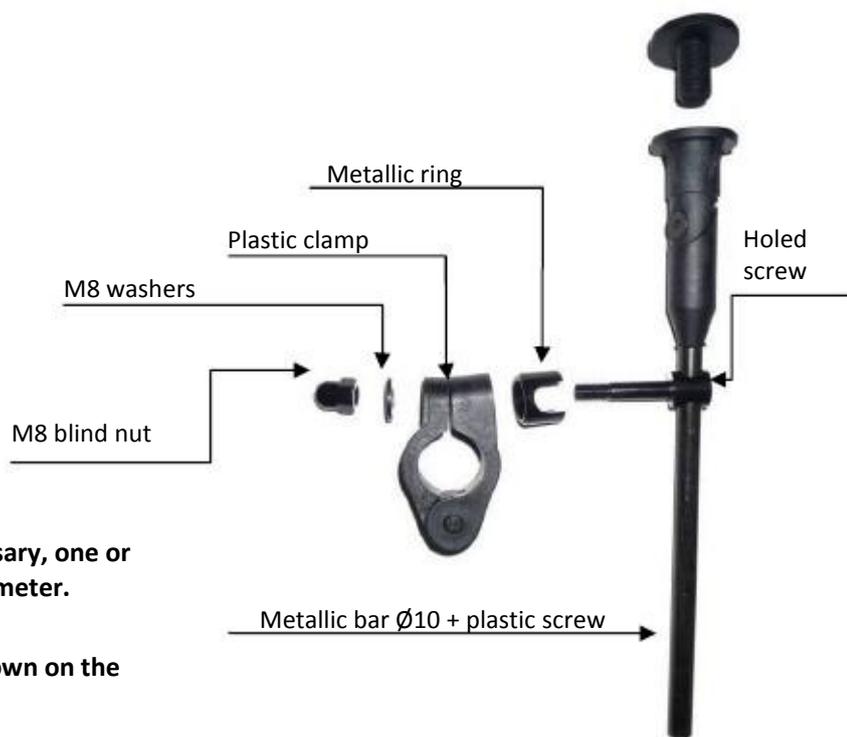

### ASSEMBLY

- Place the clamps on the handlebar by using, if necessary, one or several half-rings in order to adjust the handlebar diameter.
- Assemble the metallic bars  $\varnothing 10$  on the clamps as shown on the photo.
- Then fit the windshields with the large plastic screws.
- Adjust the position of the windshield and lock firmly the clamps.

**NB:** for strength of your plastic collars, a moisture period is required after injection: soak collars in hot water and let cool 12 hours to room temperature.

« CAUTION »

Accessories gone up on the motorbike will not be any more considered as new and will be neither retaken nor exchanged. Ermax accessories are foreseen for original equipments. They will not be guaranteed if they are used in others conditions. Due to vehicles made tolerances, beyond our control, some Ermax products might need adjusting to fit. Care to excessive clampings which may damage or break our accessories and aluminium screws. In order to increase longevity of your fixings, it is advised to polish them off with an anticorrosion product as WD40<sup>®</sup> after each washing or exposition at humid atmosphere (rain ...).